

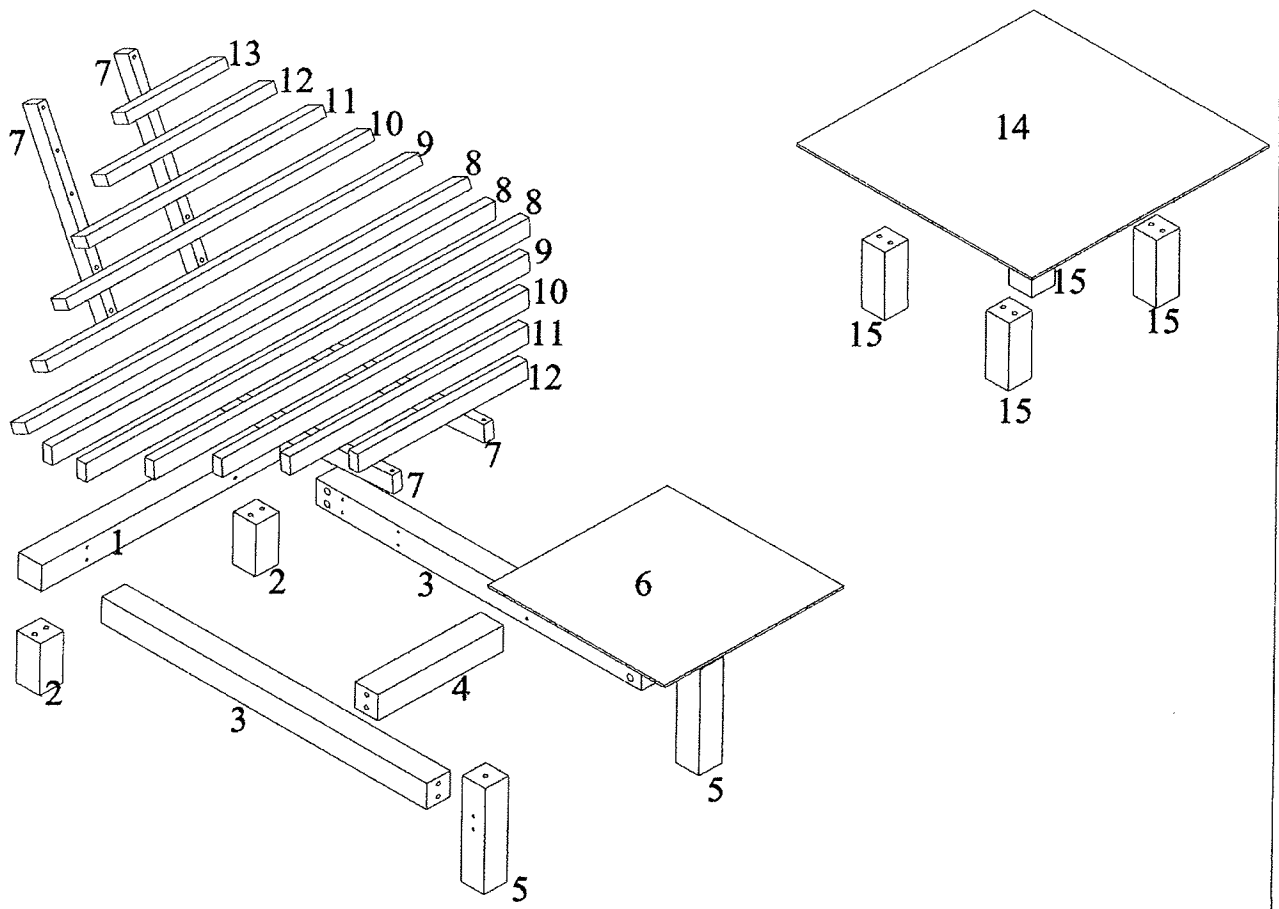
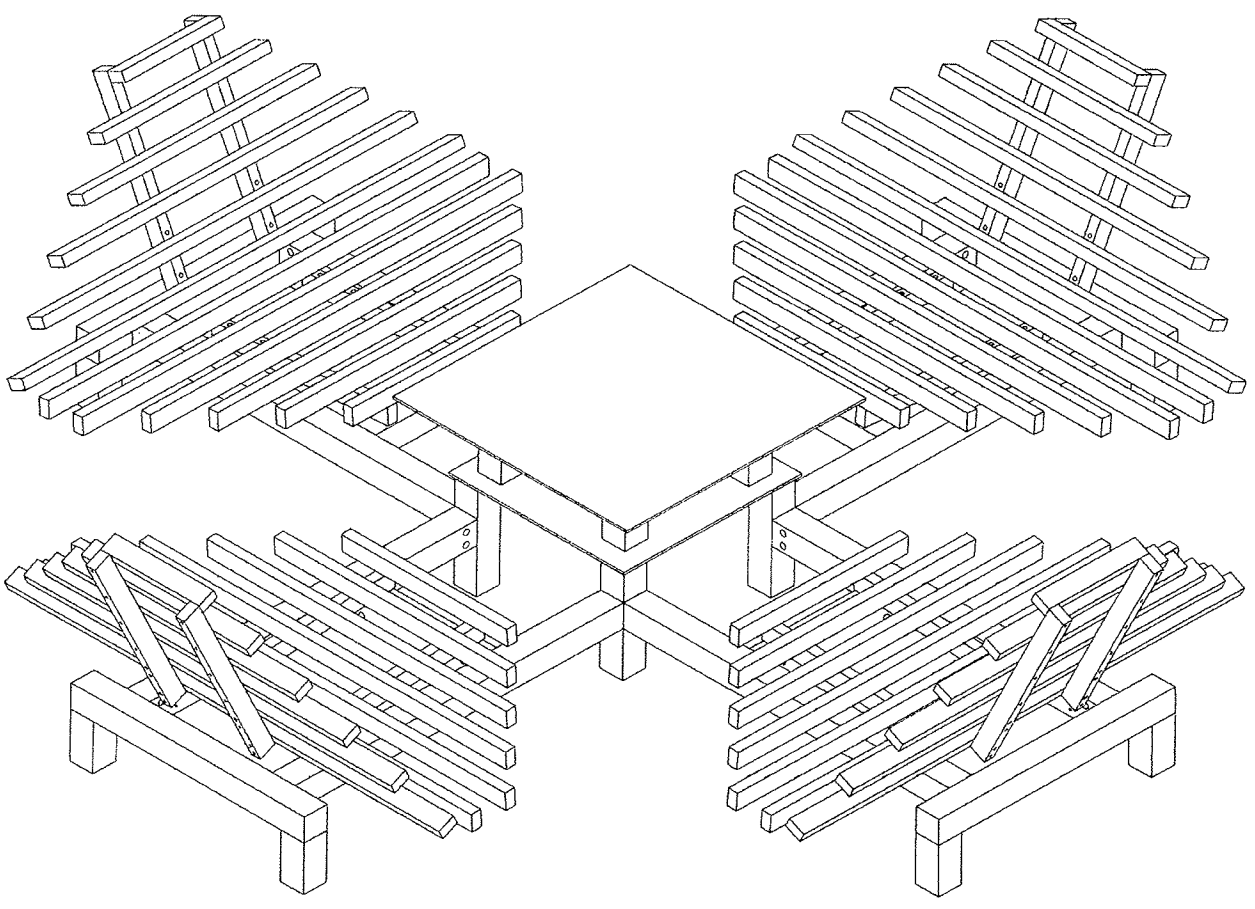


# LOTUS



# Fittings nr. 1




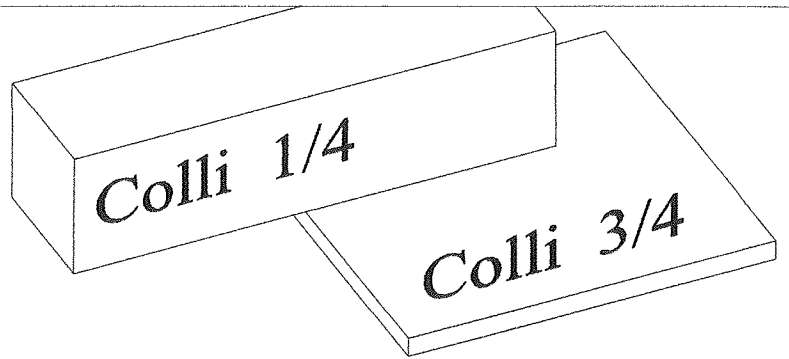


Ø3,5 x 25mm

A x48 B x48 Cx48 D<sub>x</sub>32 E x16 F x16 G x4 H x4





Ø10 x 40 mm

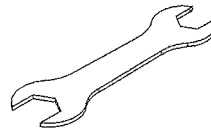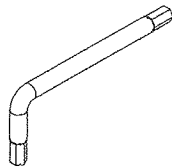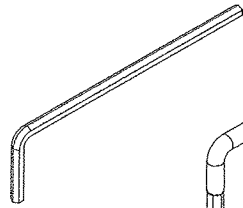


I x28 J x1 K x1 L x1 M x1

# Fittings nr. 2

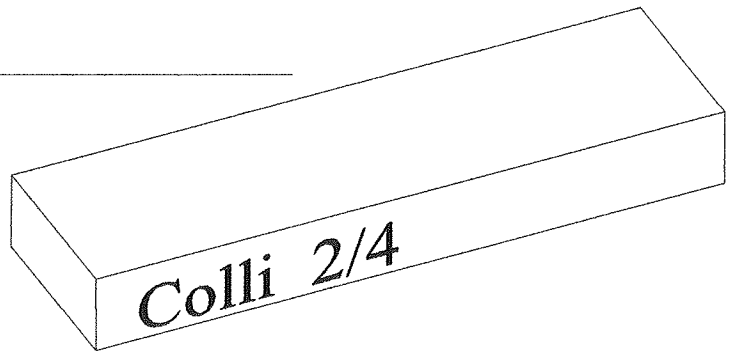

Ø7 x 70 mm



M6 x 40 mm




N x96 U x96 O x32 P<sub>x</sub>32


# Fittings nr. 3



Colli 1/4




Q x16

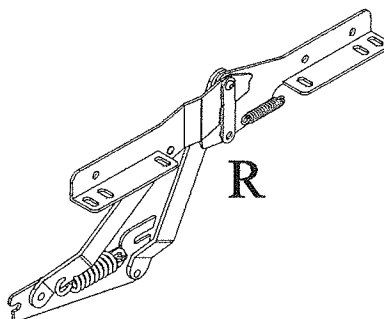

R


S x4

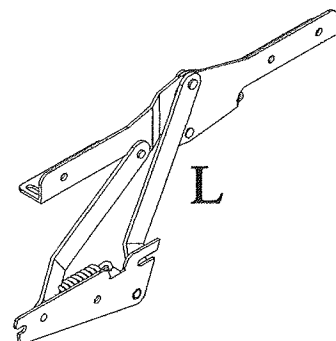


L

T x4


1

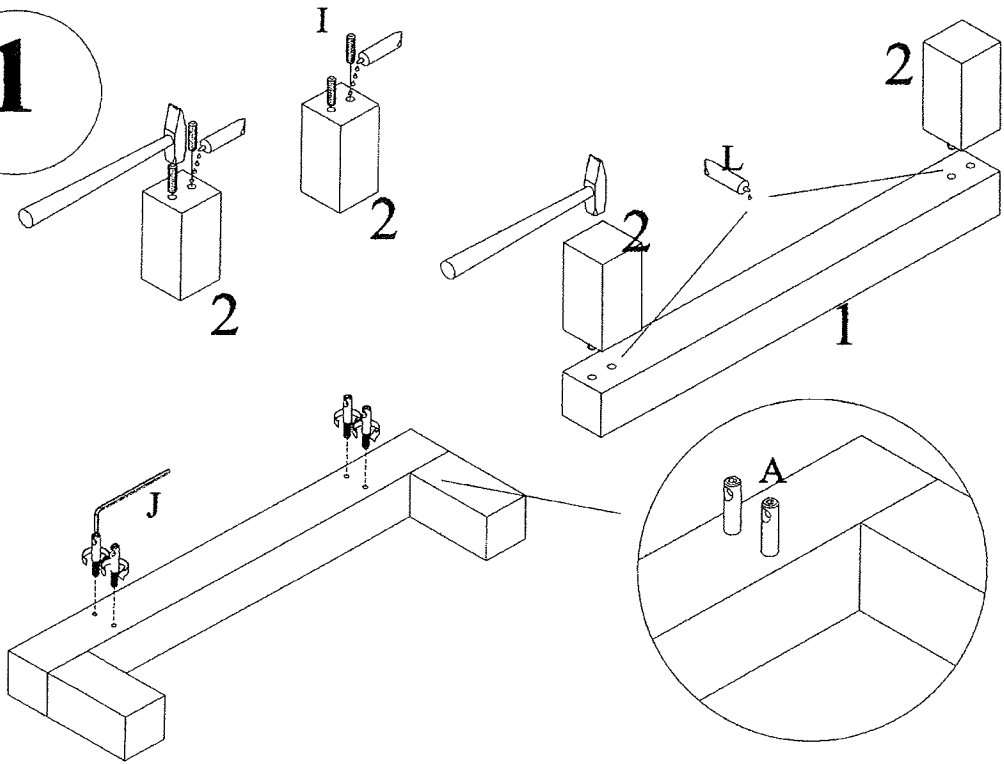


2

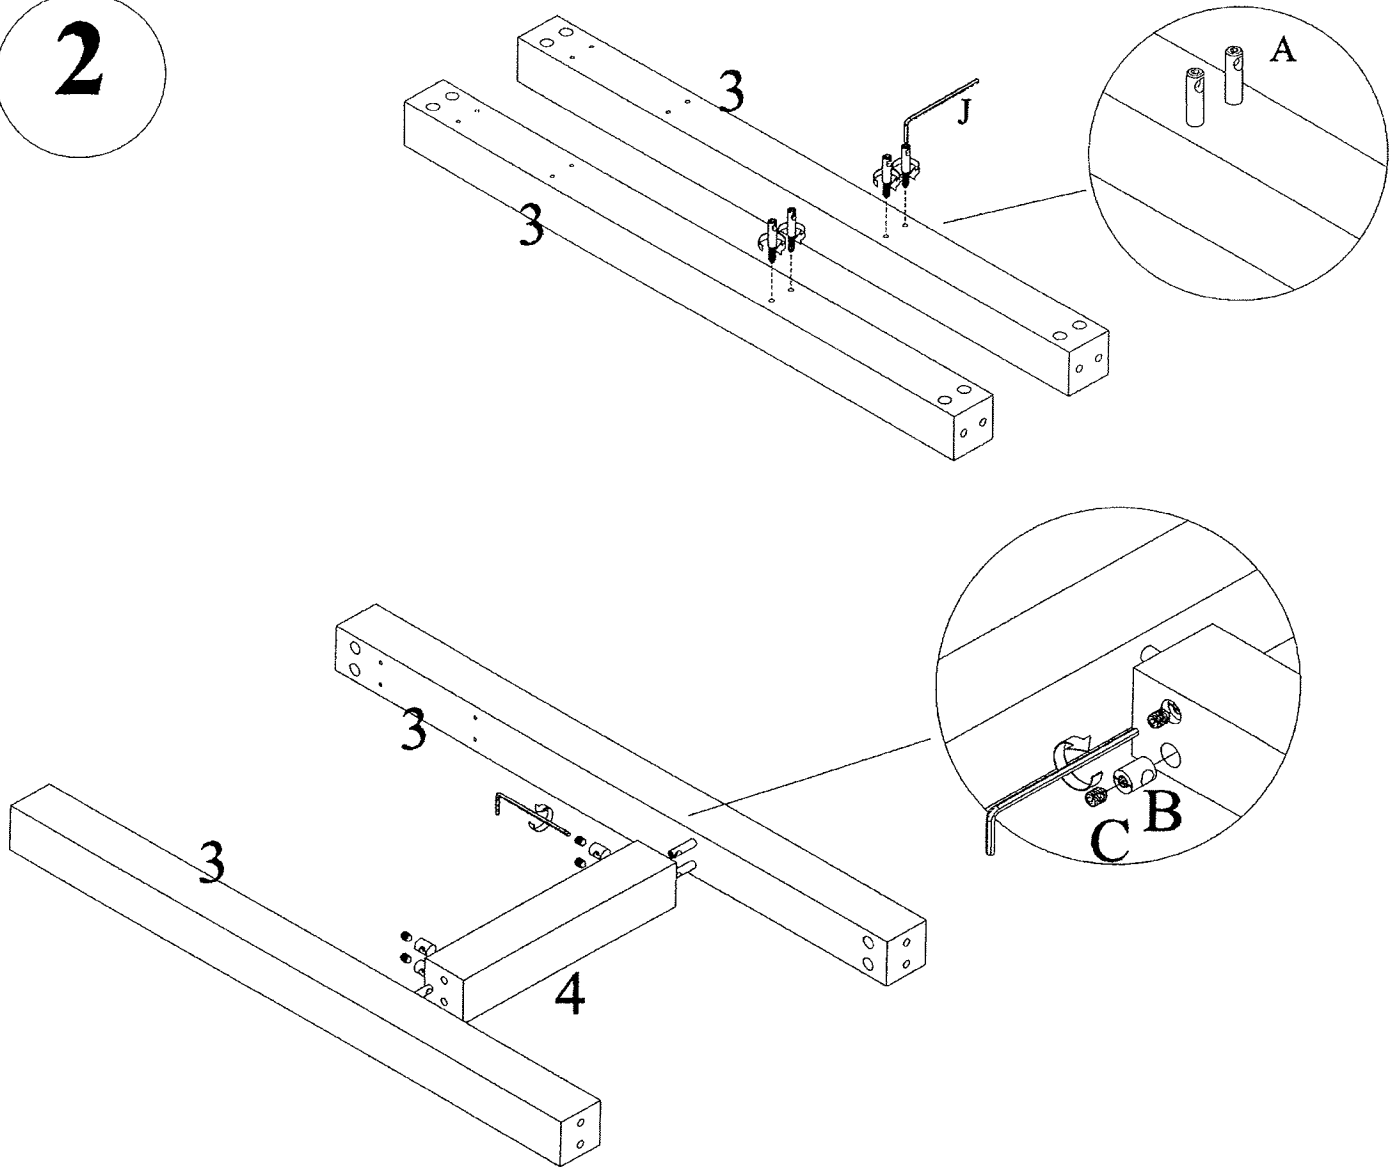


3

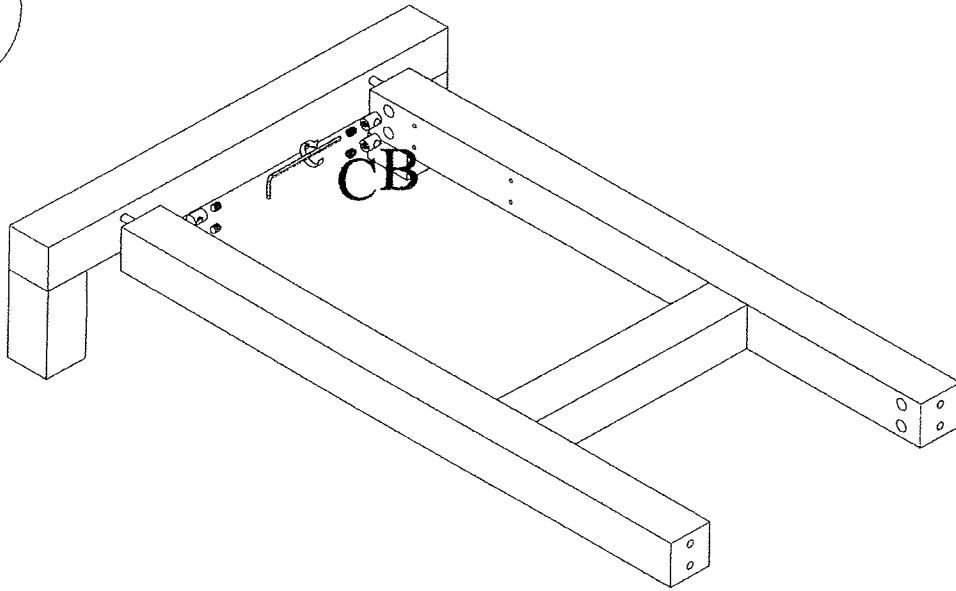


4

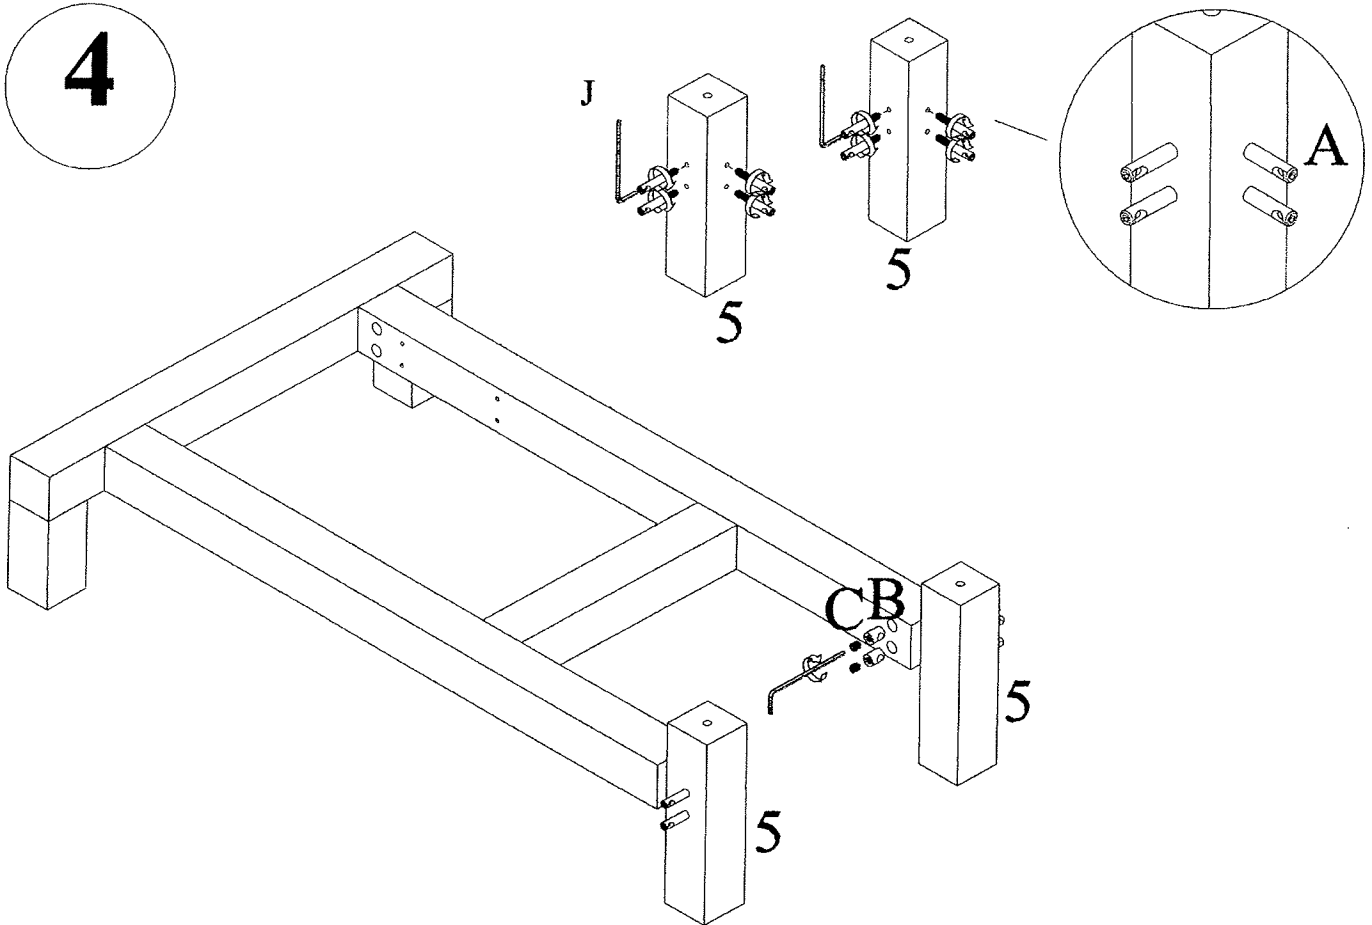








5

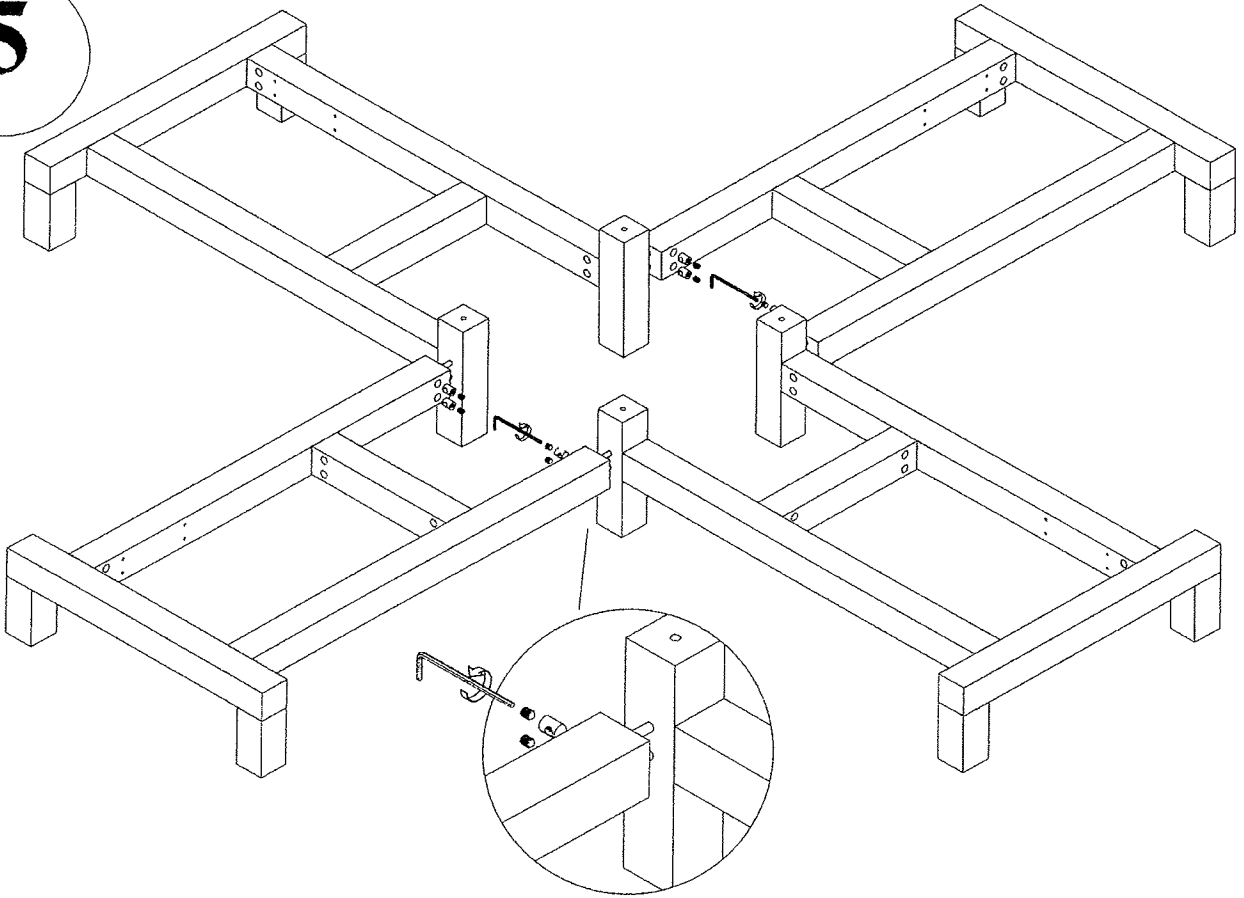


6

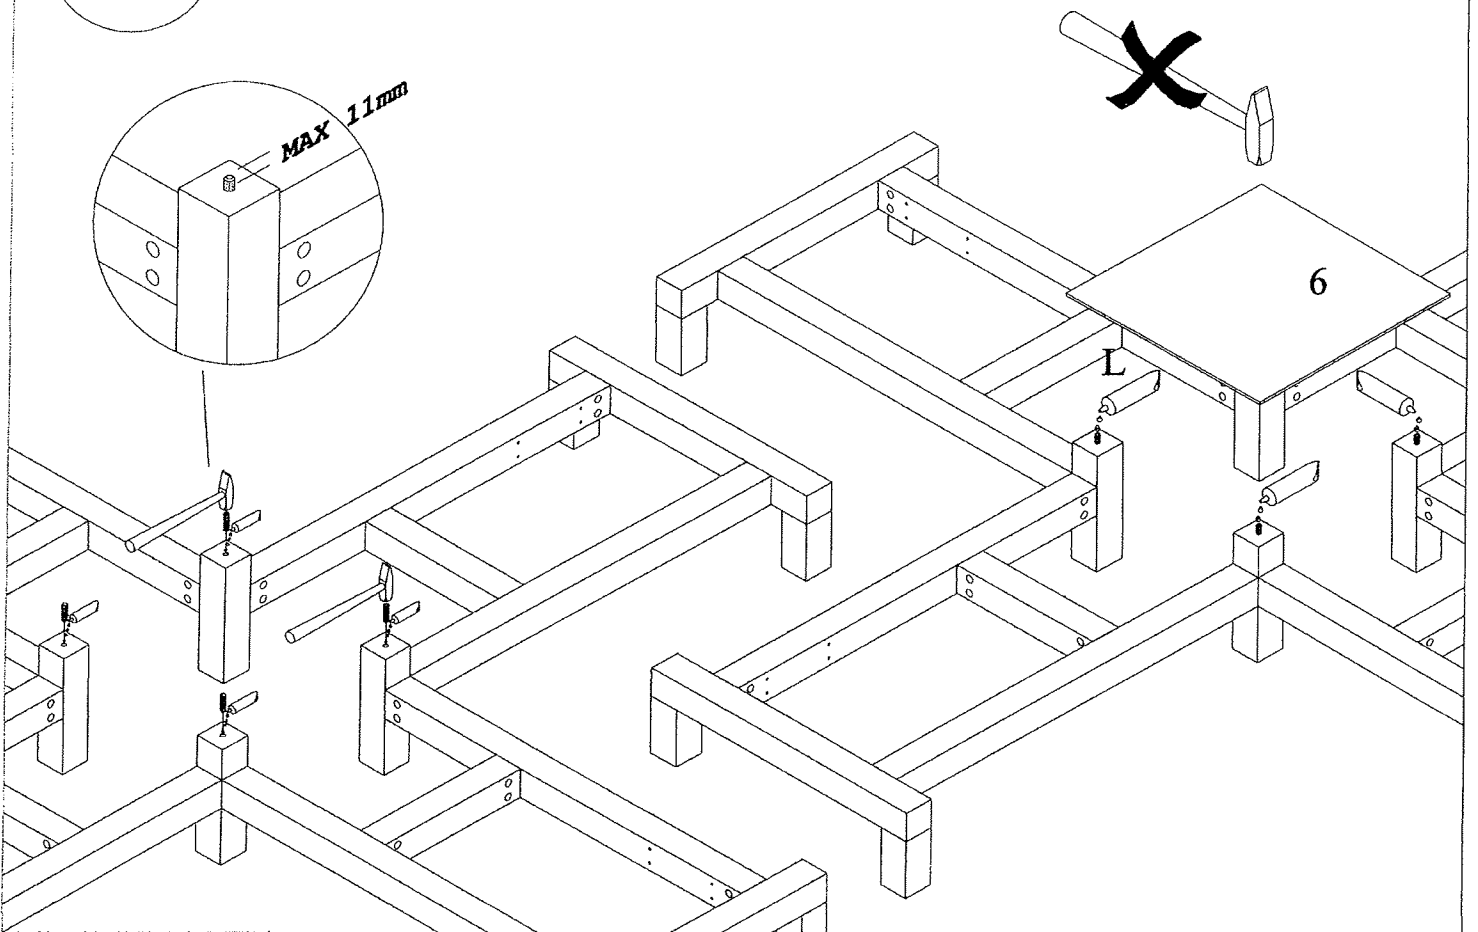


7

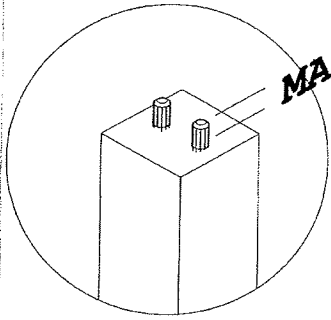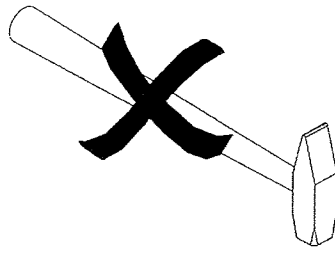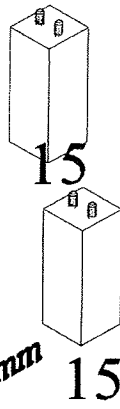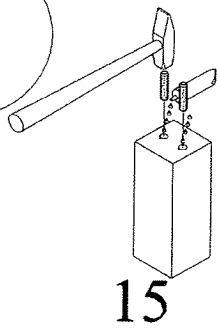


MAX 11mm

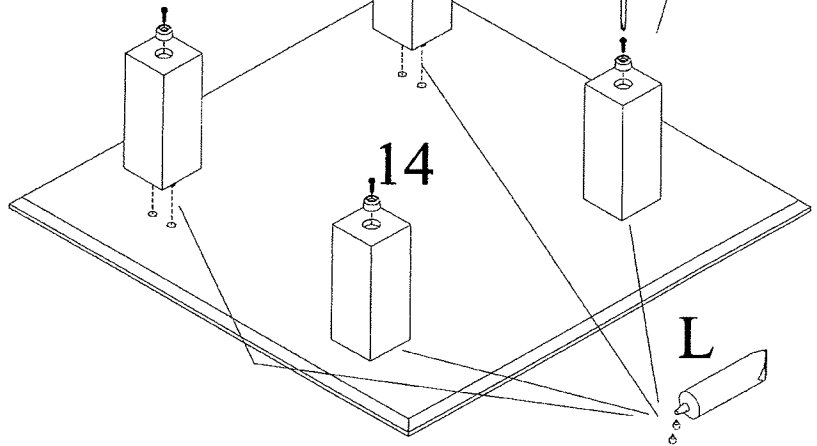


8

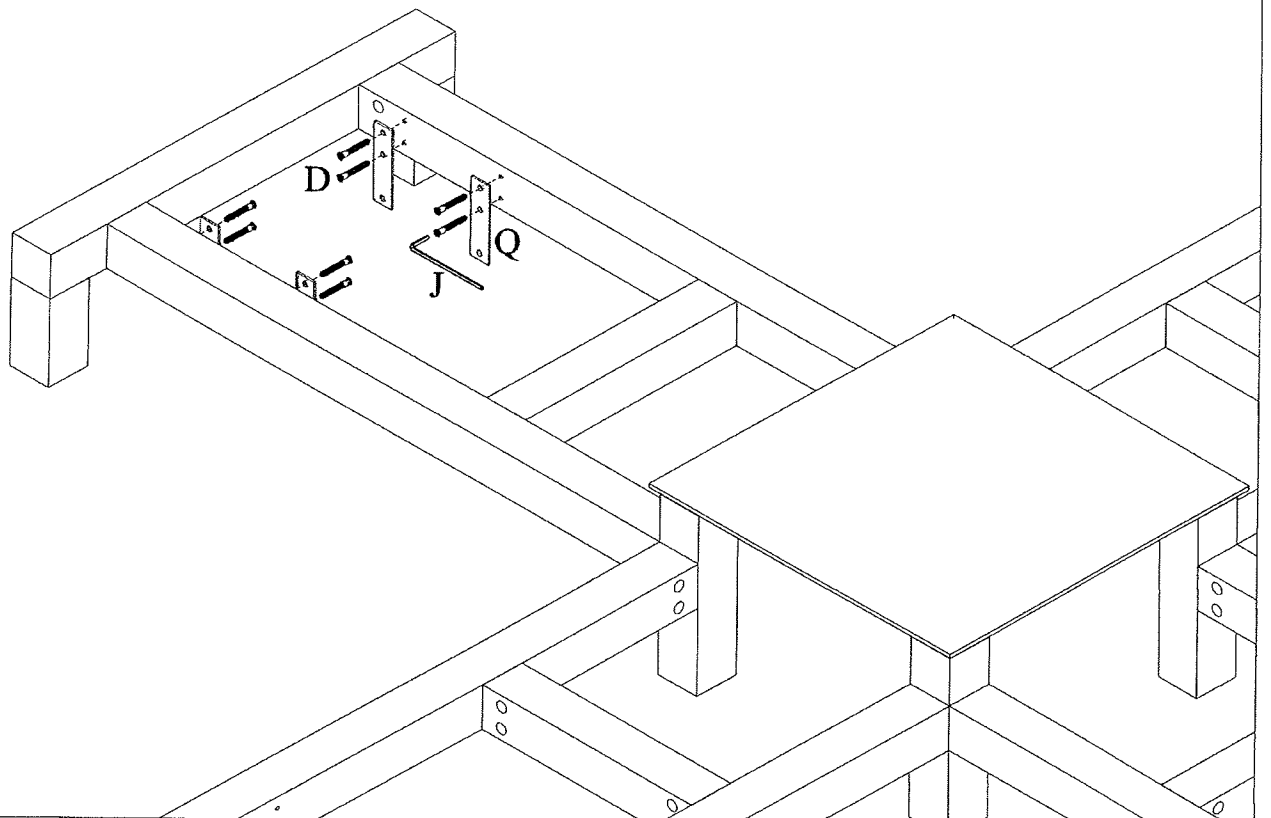


9

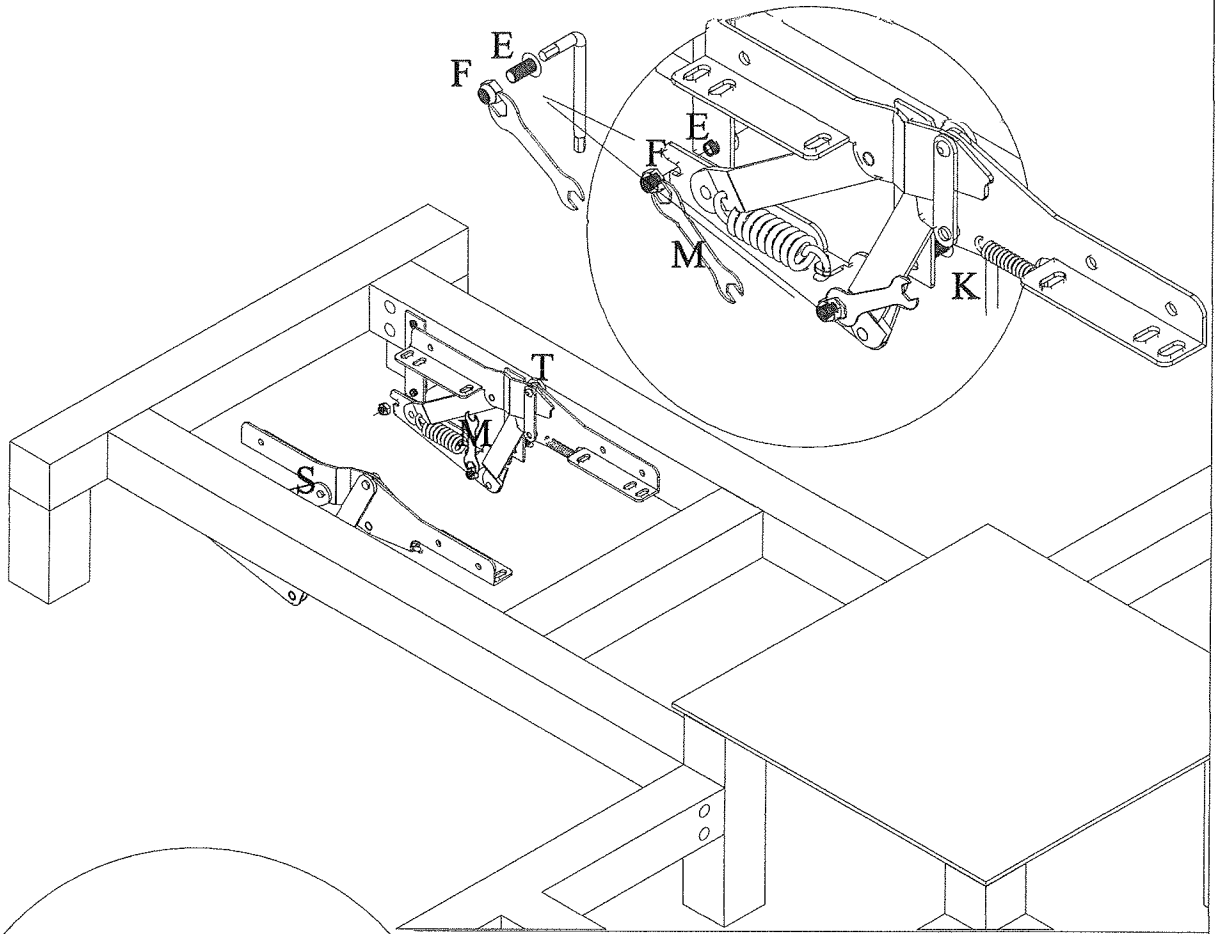

10

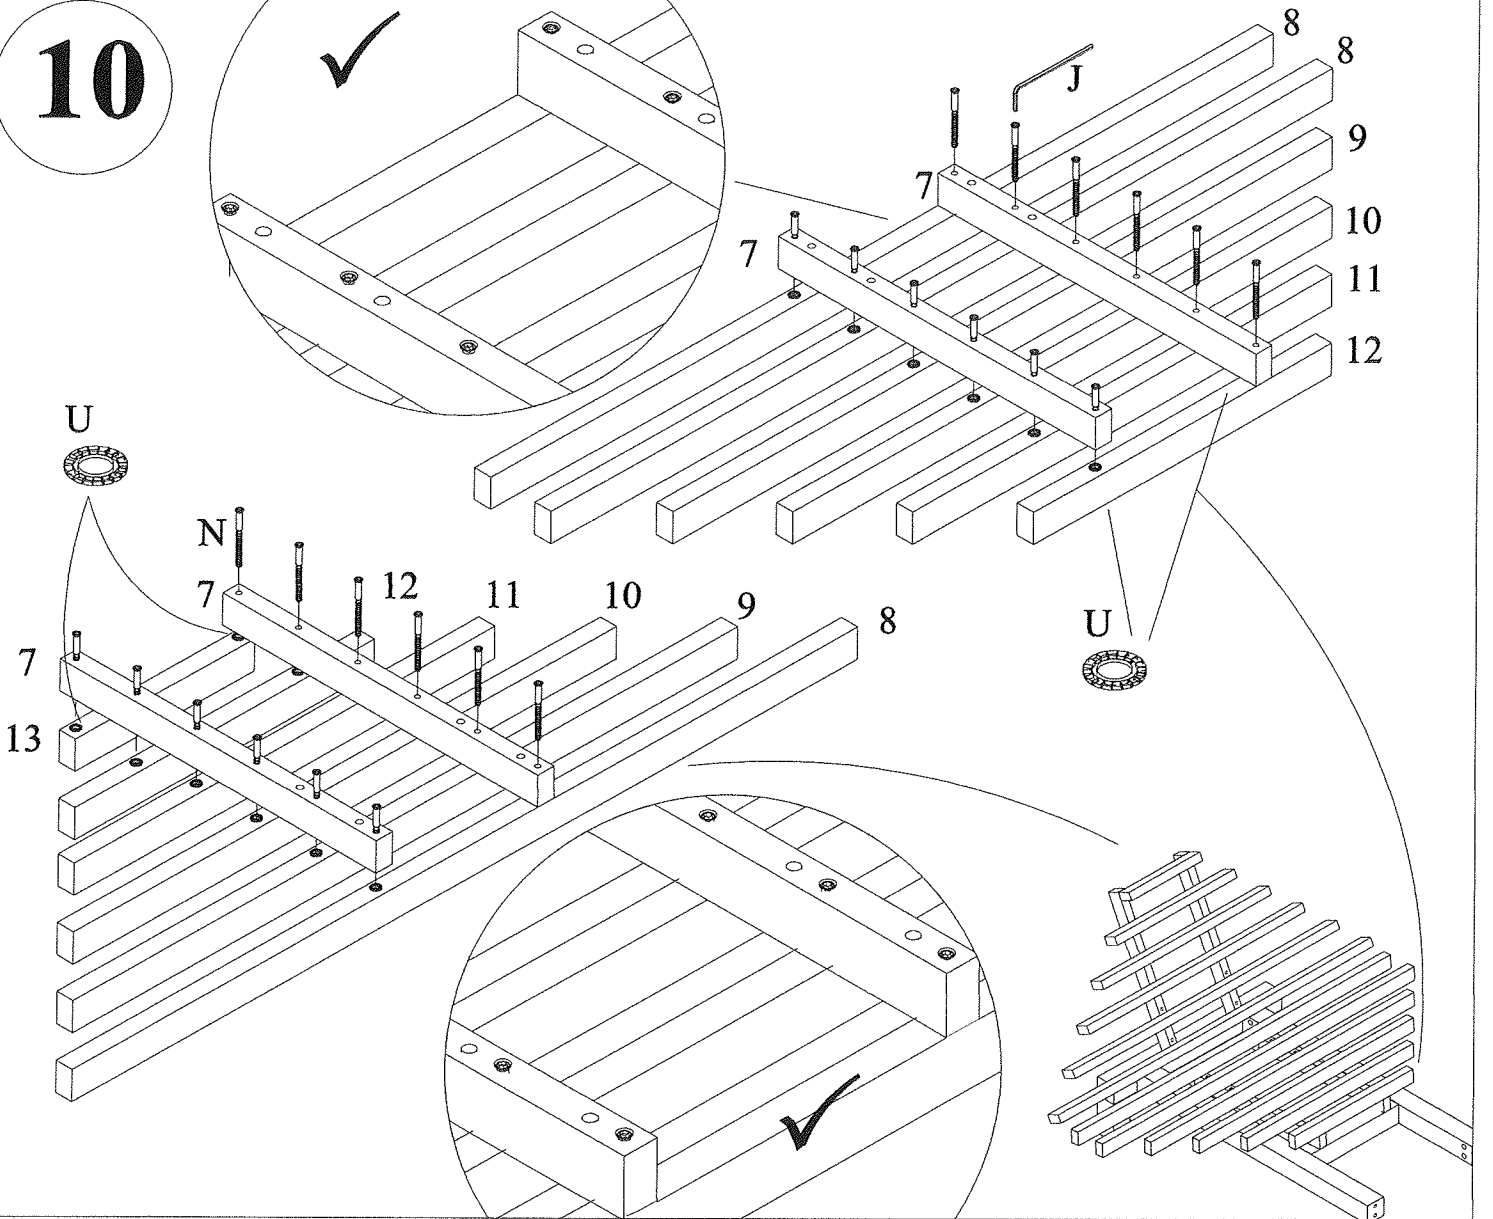

11

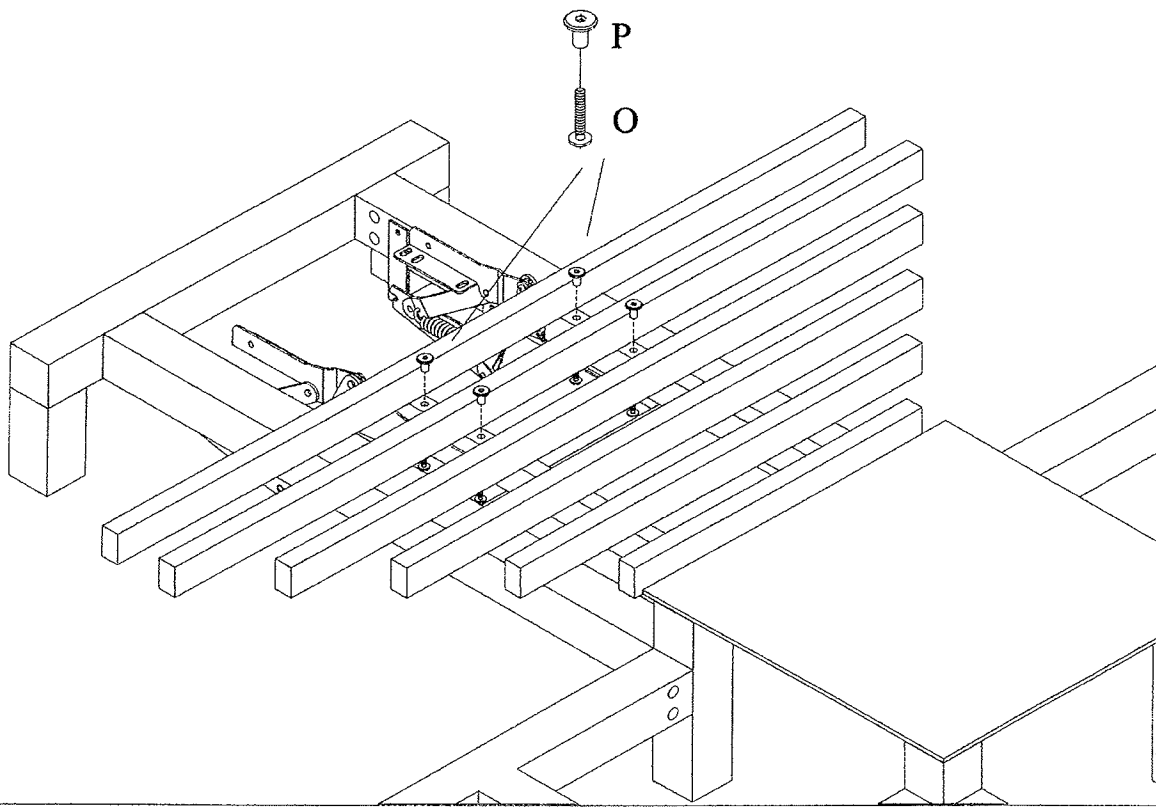

12

